

## ***VarAC EmComm Frequency configuration***

---

Placing the EmComm frequency information in the VarAC frequency chooser is as easy as editing a text file.

If the software is installed in the default directory, the file path is:

***c:\VarAC\VarAC\_frequencies.conf***

Open VarAC\_frequencies.conf with Note Pad (or other ASCII text editor)

Use the keyboard copy/paste buffer to insert a duplicate line, then amend the frequency

Such As:

***7.105.000|40m EmComm***

Be sure to save your work. And verify that Note Pad doesn't append a .txt extension to the file.

Upon VarAC restart, the frequency selection list shows the new entry.

Choices could also be listed in the file for other Bands. These are the recommended Alternate Center Calling Frequencies for EmComm.

14.105.000|20m EmComm Primary  
    14.108.750|20m EmComm Alternate  
7.105.000|40m EmComm Primary  
    7.108.000|40m EmComm Alternate  
3.595.000|80m EmComm Primary  
    3.598.000|80m EmComm Alternate